


## **SPEC SHEET**

# **Telehandler Skip**

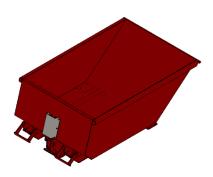




The telehandler skip is the ideal solution when moving waste around site or factory.

### The telehandler skip has the following features: -

- Automatically lock/unlocks from behind the fork heels
- Spring guard fitted (All will have after gone through workshop)
- No safety retaining chain required
- Driver ALWAYS in the safety of the cab
- Controlled tipping from within the cab
- No hydraulic hoses to attach
- Available with castors upon request. (Castors to be fitted at mwg workshops)
- Suitable for forks maximum 60mm.

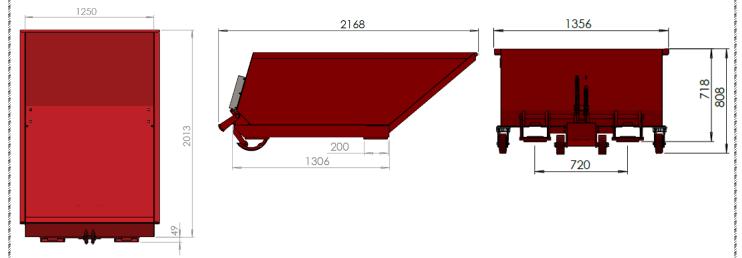

#### **Specifications**

Size (L)	Length (mm)	Width (mm)	Height (mm)	Fork channel box Internal (mm)	Self-Weight (kg)
1200	2168	1356	718	190 x 75	290
			(Without castors)		(Without castors)

SWL of the skip depends on the configuration of the lifting machine (telehandler) Add approx. 30kg to get weight with castors

#### Marwood Note!

<u>Customers should ensure they carry out a site-specific assessment of the risks and put in</u>
<u>safe system of works for the operation of the skip</u>

 $MARWOOD\ GROUP\ LTD-TECH.\ FILE$ 

Author: Technical Specifier