

## Instructions for setting up the GUARDIAN GOALPOST

A site-specific risk assessment must be carried out to determine the appropriate PPE and where to install the Goalpost. Refer to HSE guidance GS6-Avoiding danger from overhead power lines.

This document consists of the recommended method of setting up your Guardian Goalpost Kit. There are different methods for different types of height restriction, so please pay close attention to provide maximum onsite safety.

### Step 1 - Fit the Pole Securely into the Base

Place your desired base in the height restriction location. Simply place the GS6 pole into the base.

### Step 2 - Setting up the Bases



#### Galvanised Steel Base (13kg)

To correctly set up the steel base for maximum security, there are four holes to securely fix the base to the ground. (Not wind tested as depends on too many factors such as ground, anchorage and weighted down used)

Alternatively, you can use sand bags to anchor the steel base in place.




#### **Ballast Blocks**

Ensure the GS6 Pole is in place before filling the Ballast Block.

Once the pole is in place, you can fill the Ballast Block with Water or Sand to yield over 110kg in weight for a super robust stability. (Fully windspeed tested by MIRA – up 50mph)

**Step 3 - Connect your Height Restriction** 

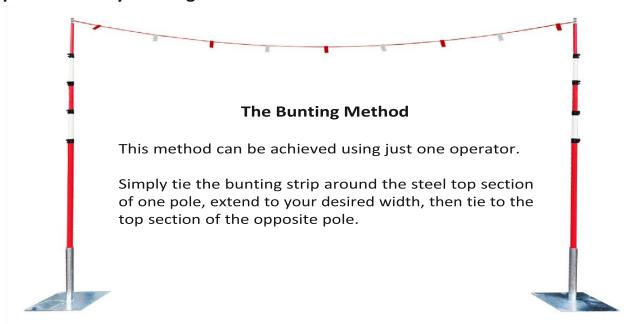

Author: Technical Specifier www.marwoodgroup.co.uk MG655/0422




## **Instructions for setting up the GUARDIAN GOALPOST**

### **Step 3 - Connect your Height Restriction**

**The Crossbar Method -** *method requires a two-man set up.* 

This method requires two operators for installation. Extend the crossbar proportionally to your desired length like shown in the image below.

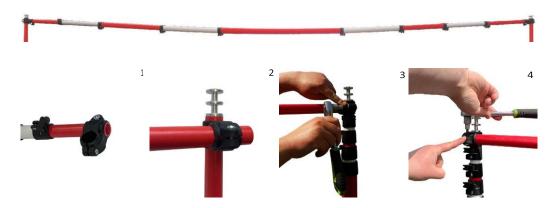

Position the crossbar elbow for placement onto the GS6 pole. Then slide the crossbar down onto the GS6 pole, fully over the steel end top section (refer to image 2). To finish, secure the crossbar by tightening the elbow with an allen key fitting. Ensure this has been completed on both elbows.

### **Step 4 - Extending the GS6 Pole**

**The Crossbar Method -** *method requires a two-man set up.* 

Both operators extend the poles proportionally to your desired height at the same time. This reduces the risk of the crossbar or elbow breaking due to unnecessary stress. Close each clamp securely after each section extension.

Once you reach your desired height, double check all the clamps are securely closed and the kit is proportional. It is then ready and safe to use.



### **The Bunting Method**

We recommend using the same method as above. However, if only one man set up is possible, ensure you extend one section at a time, each side. This will reduce the risk of unnecessary stress on the opposite pole.

**CAUTION**- Do not extend over the black stop line on each section (shown right).



Author: Technical Specifier www.marwoodgroup.co.uk MG655/0422



# Instructions for setting up the GUARDIAN GOALPOST

Configurations for roads

Figure 1



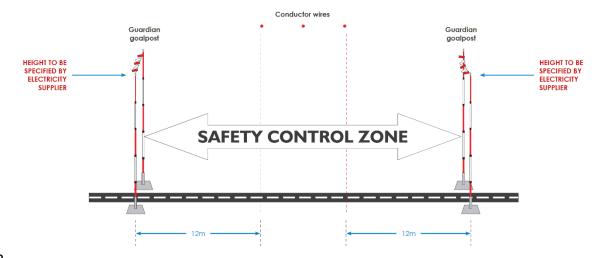


Figure 2

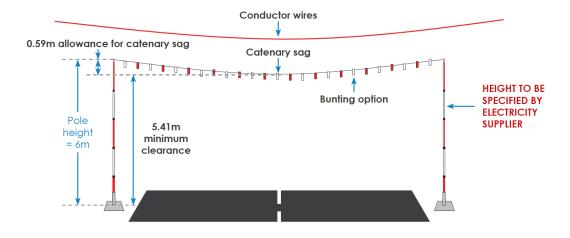

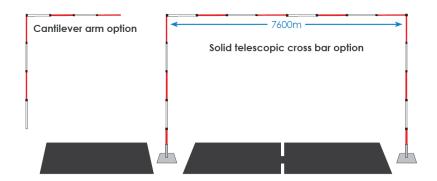

<sup>&</sup>lt;sup>†</sup>GS6 Avoidance of danger from overhead electric power lines clause 24

<sup>‡</sup>Traffic Signs Manual, Chapter 8, Traffic Safety Measures and Signs for Road Works and Temporary Situations Part 1: 2006, clause D3.2.22 states that the minimum headroom at temporary structures should be 5.41m.
Both views above are not to scale